



502


4 BUTTONS

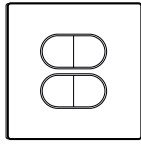


2 BUTTONS

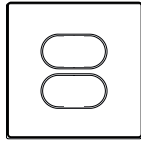

2 BUTTONS

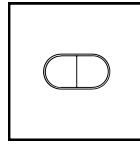


1 BUTTON

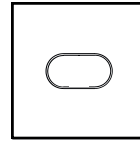


503


8 BUTTONS

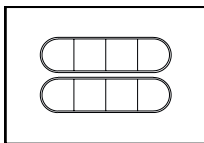





4 BUTTONS

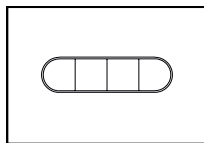

3 BUTTONS

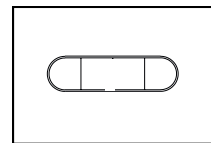


504- USB

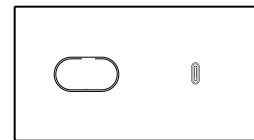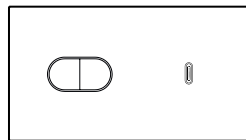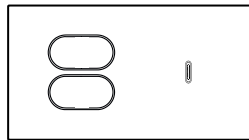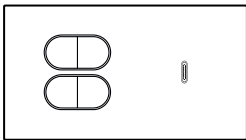


Q71


8 BUTTONS

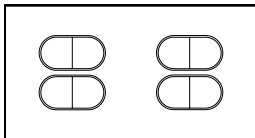


6 BUTTONS

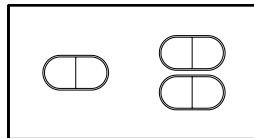


4 BUTTONS

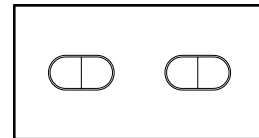


4 BUTTONS

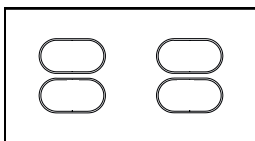

3 BUTTONS

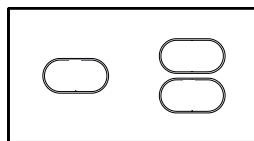


2 BUTTONS

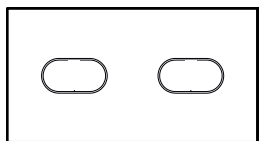


Q71 MIX


4 BUTTONS

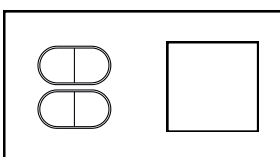


2 BUTTONS

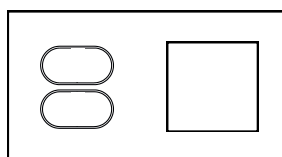


2 BUTTONS

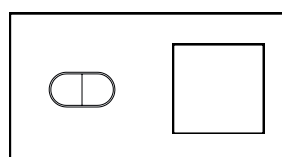


1 BUTTON

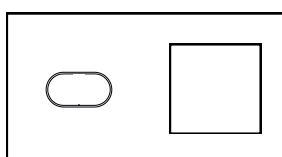

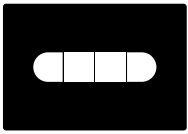

Q142

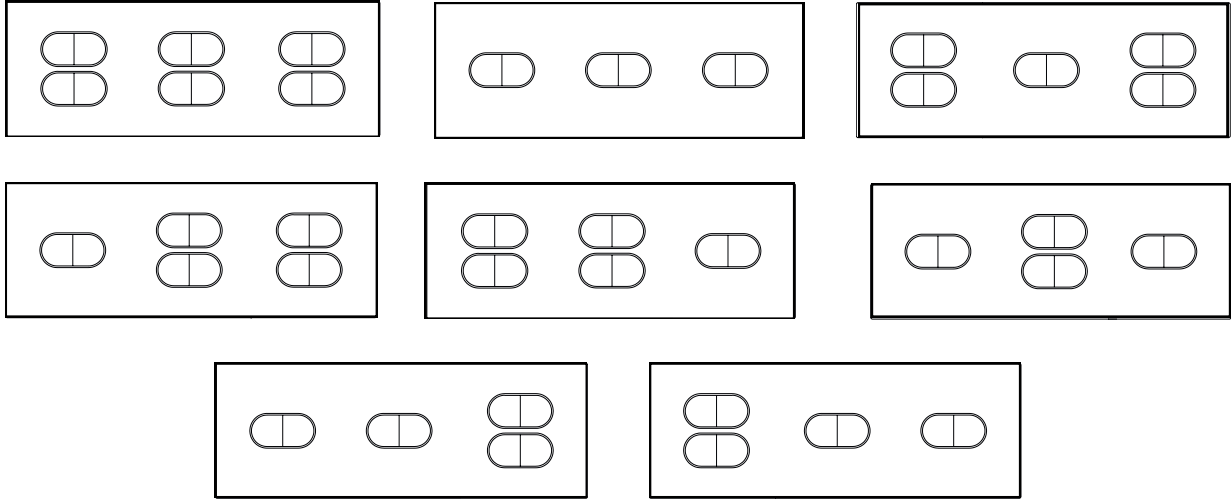

Q142mix

