 
 


**502**

 
4 BUTTONS

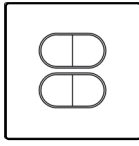


3 BUTTONS

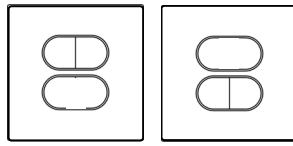

2 BUTTONS

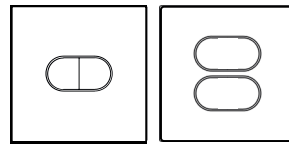


1 BUTTON

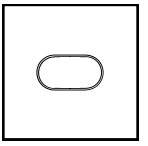 


**503**

 
8 BUTTONS

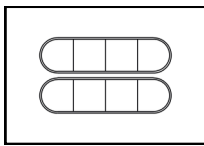





4 BUTTONS

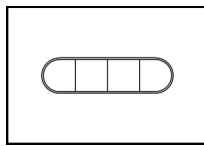 

3 BUTTONS

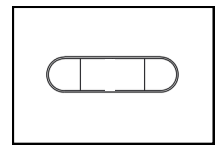 


**504- USB**

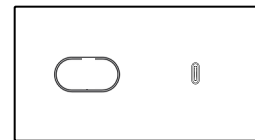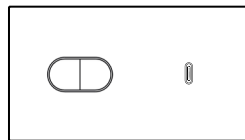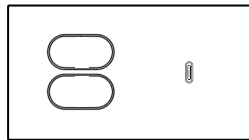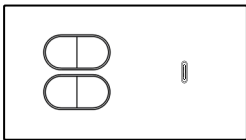    


**Q71**

 
8 BUTTONS

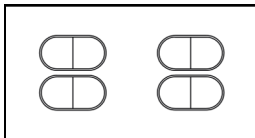


6 BUTTONS

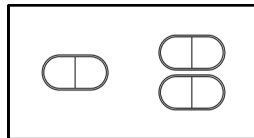 


4 BUTTONS

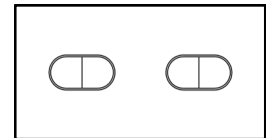 


4 BUTTONS

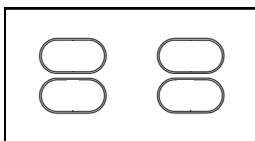 

3 BUTTONS

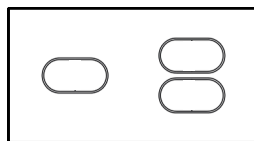 


2 BUTTONS

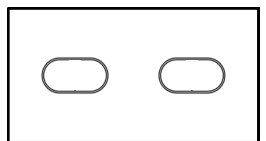 


**Q71 MIX**

 
4 BUTTONS

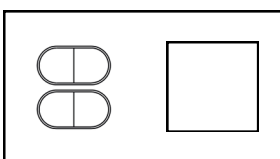


2 BUTTONS

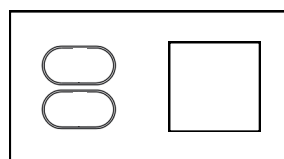 


2 BUTTONS




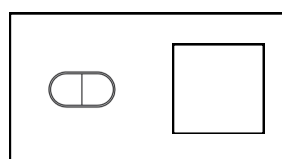 


1 BUTTON








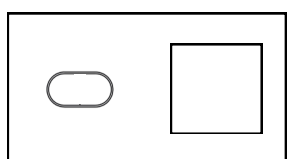 


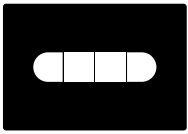













**504- USB**

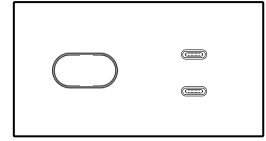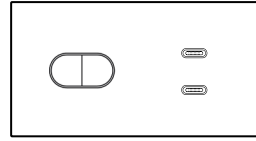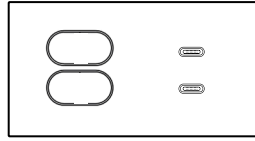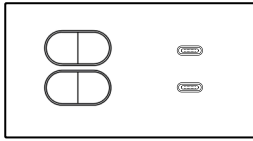    


**Q142**

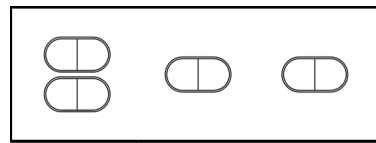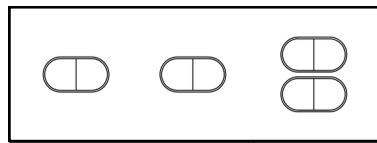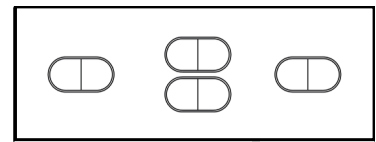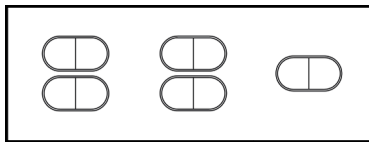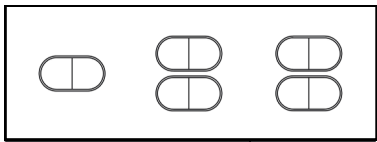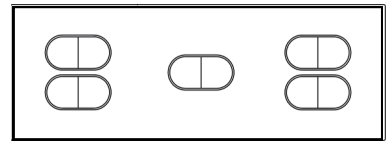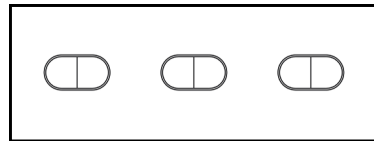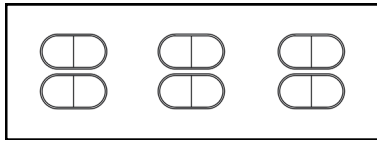        

**Q142 MIX**

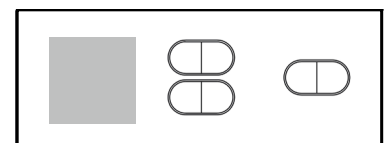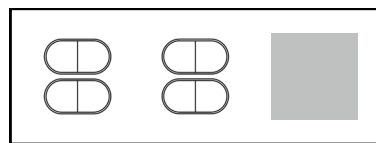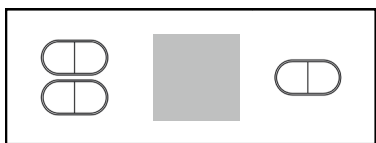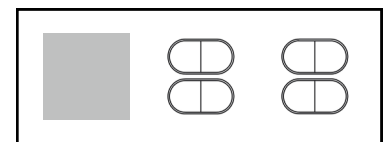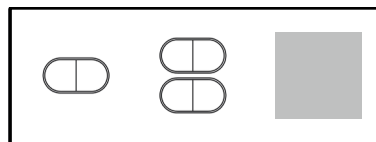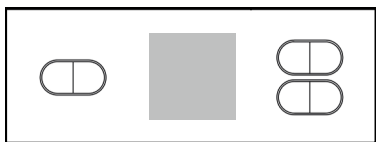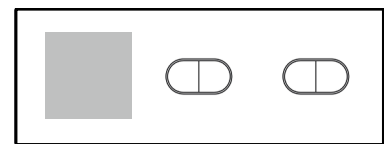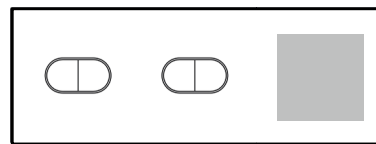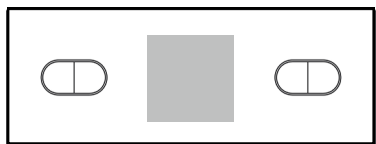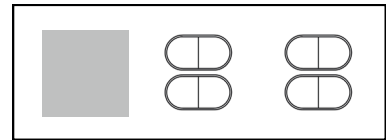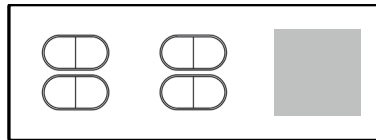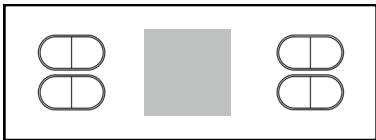            


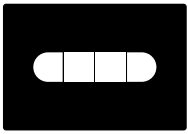 


COVER PRESE

SOCKET COVER

 
502




502-ROUND

 


503

 


504

 


Q71

 


Q71 - 1 R

 

Q71 - 2 R

 


Q142

 


USB-C Caricatori

USB-C Chargers

Q/USB-C | 2 502

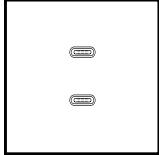 

Q/USB-C | 2 503

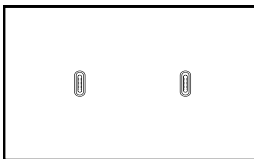 

Q/USB-C | 4 Q71

